Instructions for replacing SIM cards



Remove 4 screws from base of unit (ensure that the metal and rubber washers are stored in a safe place)



Carefully ease inner assembly out of the outer case and position as shown (avoid any tension to the wiring between the outer case and the inner assembly)



Use a pointed object (eg ballpoint pen) to press the yellow button on the GSM module to release the SIM card holder



Withdraw the SIM card holder

Replace the SIM card



Reinstall the SIM card holder (ensure the SIM card is seated fully into the holder and that the holder is fully inserted)

Refit inner assembly into outer case ensuring that no wiring is trapped underneath the base plate.

Secure inner assembly into outer case using 4 screws ensuring the metal and rubber washers are fitted.